



## OPERATING MANUAL

### Concrete Compression Testing Machines MC-400PR, MC-400PRP & MC-500PR



Rev: 06/15/2015

**IMPORTANT – PLEASE READ BEFORE MOVING THIS MACHINE**

**WARNING!:** This machine is extremely heavy and may be unstable until properly installed. Attempting to move or reposition it without using proper equipment and procedures may result in severe injury or death. Properly rigged lifting equipment of sufficient capacity must be used, the load must be secured, and lifting equipment operators must be qualified and knowledgeable in the use of the equipment.

**IMPORTANT – PLEASE READ BEFORE OPERATING TESTING MACHINE**

1. Inspect to see that no visual damage has occurred during shipping. If you see any damage, contact Gilson Company, Inc. right away.
2. Check the equipment you received with your packing list.
3. It is recommended that the machine be located in an area where the atmosphere is free from acidic or contaminating fumes, which could possibly accelerate corrosion to machine surfaces or electrical contacts.
4. Position the machine leaving sufficient space at the rear and sides for calibration or service work.
5. The machine should be leveled.
6. Clean off machined surfaces that have been coated with rust preventative using any suitable non-corroding safety solvent. Wipe machined surfaces with a clean, oil soaked rag to minimize rusting.
7. When adding or changing oil, use only Dextron II or Dextron III automatic transmission fluid.

**NOTE:** This machine has been operationally tested and calibrated at the factory. In order to fully comply with the requirements stated in ASTM C 39, the compression machine should be calibrated again “On original installation or immediately after relocation.” Gilson does not provide calibration services directly, but can provide a list of calibrators in your area. Contact our Technical Department at **800.444.1508** or **techsupport@gilsonco.com**.

# Table of Contents

	<b>Page</b>
<b>Safety Instructions</b>	<b>2</b>
<b>Table of Contents</b>	<b>3</b>
<b>Foreward</b>	<b>5</b>
<b>1.0 Introduction</b>	<b>5</b>
1.1 Options	5
1.2 Test Reports	5
<b>2.0 The Keys and Their Functions</b>	<b>5</b>
2.1 Setup Key	5
2.2 Number Keys	5
2.3 Enter Key	5
2.4 Clear Key	5
2.5 Cancel Key	5
2.6 Sample ID Key	5
2.7 Tare Key	5
2.8 Arrow Keys	5
2.9 Date/Time Key	6
2.10 Print Key	6
<b>3.0 The Setup Menu</b>	<b>6</b>
3.1 Engineering Units	6
3.2 Sample Type	6
3.3 Sample Break	7
3.4 Test Report Options	7
3.5 Print Options	8
3.6 Rate Options	8
3.7 Peak Load	9
<b>4.0 How to Enter a Sample Identification Code</b>	<b>9</b>
<b>5.0 Test Setup</b>	<b>9</b>

# Table of Contents

	<b>Page</b>
<b>Hydraulic Control Valve &amp; Hydraulic Pump Section</b>	<b>11</b>
<b>6.0 Hydraulic Control Valve</b>	<b>12</b>
6.1 Metered Advance Position	12
6.2 Full Advance Position	12
6.3 Hold Position	12
6.4 Retract Position	12
6.5 Control Valve	13
6.6 Sequence of Operation	13
6.7 Maintenance and Safety Precautions	13
6.7.1 Pump and Flow Control Valve	13
6.7.2 Safety Precautions	14
6.7.3 Hydraulic Fluid Level	14
6.7.4 How to Operate the Pump	14
6.7.5 Trouble Shooting	15
<b>7.0 Valve Assembly</b>	<b>16</b>
7.1 Valve Diagram	16
7.2 Valve Parts List	17
<b>8.0 Electrical Hydraulic Pump</b>	<b>18</b>
8.1 Pump Diagram	18
8.2 Pump Parts List	18
8.3 Electrical Schematic	19
8.4 Wiring Diagram	19
8.5 Basic Pump Assembly	20
8.5.1 Bottom View	20
8.5.2 Parts List and Bolt Tightening Sequence	21
8.5.3 Pump Assembly Side View	22
8.5.4 Pump Assembly Parts List	23
8.5.5 Hydraulic Schematic	23
8.5.6 High Pressure Pump Assembly	24
8.5.7 High Pressure Pump Assembly Parts List	25
8.5.8 High Pressure Bolt Tightening Sequence	25
<b>9.0 Warranty Statement</b>	<b>26</b>

## FOREWORD

This section of the manual is designed to provide instructions on the set up of the **Pro-Plus Digital Indicator**. Please take a few moments to read through it and become familiar with the operation. If you require technical support, please contact us at [techsupport@gilsonco.com](mailto:techsupport@gilsonco.com) or **800 444-1508**.

## 1.0 INTRODUCTION

Standard information displayed on the indicator are peak load, peak stress, rate of load and if activated, average rate of load applied to a sample during a test.

### 1.1 Options

Optional information is user selectable and will be included on the standard test report, if activated. Test report options are described in detail in Section 3.4 of this manual.

### 1.2 Test Reports

Test reports can be optionally stored to memory, printed on an optional printer or downloaded to a computer with an optional download program. Details for all options can be found in the following pages.

## 2.0 THE KEYS & THEIR FUNCTIONS

### 2.1 The <SETUP> Key

The <SETUP> key is a soft key, used to open and display a list of all menus for test setup functions.

### 2.2 The <NUMBER> Keys

The <NUMBER> keys are used to select and open an individual menu option and to input a numerical value into a data entry field.

### 2.3 The <ENTER> Key

The <ENTER> key is used to accept and set a numerical value into the data entry field of any menu option. It is also used in the calibration procedure.

### 2.4 The <CLR> Key

The <CLR> key is used to backspace the cursor to erase an incorrectly set character in a data entry field, and al-

low additional data entry into the field.

### 2.5 The <CANCEL> Key

The <CANCEL> key is used to clear all characters in a data entry field and close a prompt without entry of data.

**NOTE:** Data must be reset in cleared prompt for menu to function.

### 2.6 The <SAMPLE ID> Key

The <SAMPLE ID> soft key is used to open a prompt for entering an individual test sample identification code into memory.

### 2.7 The <TARE> Key

The <TARE> key is used to set a new zero load status by nullifying all tare weight associated with floating the machines piston by moving it off its mechanical stops. It also clears displayed test results from the buffer and initializes the indicator for the next test.

**NOTE:** Make sure all displayed test data is documented before pressing the <TARE> key as all displayed test data will be lost.

### 2.8 The <ARROW> Keys

The <ARROW> keys are used when setting an alphanumeric sample identification code, changing time and date, and in the calibration program.

## 2.9 The <DATE/TIME> Key

The <DATE & TIME> soft key is used to open the menu for changing the time and date.

### HOW TO SET:

Press <SETUP> soft key to open option and display prompt. Press <TIME/DATE> soft key to display time and date on the screen. The characters values contained inside the highlighted box can be increased or decreased in value by pressing the Up/Down scroll <ARROW> keys. To move highlighted box press Right/Left scroll <ARROW> keys and repeat procedure to adjust values. When correct values are set press the <CANCEL> key to enter. Press the <EXIT> key to return to the testing screen.

## 2.10 The <PRINT> Key

The <PRINT> key can be used to print a report of the current test displayed on the indicators screen.

**NOTE:** See print options in Setup Menu for additional Printing and Transfer functions.

## 3.0 THE SETUP MENU

Press the <SETUP> soft key to display setup menu options of:

1. Engineering Units
2. Sample Type
3. Sample Break
4. Test Report Options
5. Print Options
6. Rate Options
7. Peak Load

### 3.1 Engineering Units

Pressing the <1> key, Engineering Units from the main Setup Menu displays options:

1. Load
2. Stress
3. Size

**Load Units** – Press the <1> key to display menu options. To select required load unit press appropriate menu number key. Press <EXIT> key to return to Engineering Units menu.

**Stress Units** – Press the <2> key to display menu options. To select required stress unit press appropriate

menu number key. Press <EXIT> key to return to Engineering Units menu.

**Size Units** – Press the <3> key to display menu options. To select required size unit press appropriate menu number key. Press <EXIT> key to return to Engineering Units menu.

To return to the Setup Menu, press the <EXIT> key.

### 3.2 Sample Type

Pressing the <2> key, Sample Type from the main Setup Menu displays options:

1. Cylinder
2. Cube
3. Beam Third Point
4. Beam Center Point
5. Cross Sectional Area
6. Cylinder Split in Tension

Press the <NUMBER> keys 1 through 6 to select the sample type and open the menu to set the required sample dimensions.

**NOTE:** Current dimensional settings will be displayed; if values are correct, press <EXIT> key to return to the Sample Type menu. To change displayed dimensional values press appropriate <NUMBER> key on the menu for prompt, which is displayed in a box on the lower left hand side of screen.

**Example:** Press <1> Cylinder, to select and open menu options <1> Diameter or <2> Length to change dimensional values. Press <1> key for diameter prompt, enter required values through <NUMBER> keys, press <ENTER> key to set values. Press <2> key for length prompt, enter required values through <NUMBER> keys, press <ENTER> key to set values. Press <EXIT> key to return to Sample Type menu.

**NOTE:** If a character was entered incorrectly, press the <CLR> key to backspace the cursor one character at a time, then enter correct character value and press <ENTER> key to set.

### 3.3 Sample Break

The Sample Break feature has two independent operating functions of Load Threshold value and Sample Break yield strength break percentage.

Load Threshold is the load value setting at which the Rate of Loading function becomes activated and is displayed on the indicators screen. Its factory default setting is 500lbs or metric equivalent. The threshold value setting should be set in the load unit type in which the indicator will be operated in: e.g. lb., kN, etc. See Section 3.1 “Engineering Units” load unit type, for setup instructions.

**NOTE:** The threshold function will not accept a load value setting below 100lbs or its metric equivalent.

Sample Break is defined as a percentage of sample yield strength and functions to define the end of a test. When activated the indicator will display both the peak load applied to the test sample and the samples peak stress value.

**NOTE:** The factory default setting is 50%.

#### HOW TO SET:

Press the <3> key Sample Break from the main Setup menu to display options of:

1. Load Threshold Value
2. Sample Break Percentage

**Load Threshold** – Press the <1> key to select and open prompt. Change the current value setting through <NUMBER> keys and press <ENTER> key to set.

**Sample Break** – Press the <2> key to select and open prompt. Change the current value setting through <NUMBER> keys and press <ENTER> key to set.

Example: If sample break percentage setting is 25% and the maximum peak load applied to the test sample is 100,000lb (444.8kN), the indicator will terminate the test when the internal load value falls below 75,000lb (333.6kN), or 25% of the applied peak load.

**NOTE:** Setting a low value percentage of 5% or less may cause the indicator to prematurely end a test.

### 3.4 Test Report Options

Pressing the <4> key Test Report Options from the main Setup menu will display the following list of report options:

1. Operator ID Number
2. Cylinder Break Type
3. Cylinder Correction Factor
4. Cylinder Cap Type
5. Sample Age
6. Sample Weight
7. Average Rate of Load
8. Auto Store

The test data for an option will be included on the standard test report if activated. The information listed on a Standard Test Report includes: Test Date, Time, Identification Code, Sample Type, Sample Length, Sample Area, Peak Load and Peak Stress.

**Operator I.D. Number** – Press the <1> key from the options menu to toggle between OFF/ON. When activated, at the prompt enter the Operator ID Number and press the <ENTER> key to set. Once set, the ID Number will be added to the test report until changed or toggled to OFF position.

**Cylinder Break Type** – Press the <2> key from the option menu to toggle between OFF/ON. When activated at the end of a cylinder test, a list of cylinder break type patterns as listed in ASTM C 39, part 7.4, Figure 2 will be automatically displayed. To select and store a break type, press appropriate menu <NUMBER> key to select and store.

**Cylinder Correction Factor** – Press the <3> key from the option menu to toggle between OFF/ON. When activated function automatically corrects peak stress value of a test cylinder to ASTM C 39, part 8.2, if cylinder length to diameter ratio is 1.75 or less. Function requires that the correct cylinder diameter and length must be entered into the cylinder sample type menu in order to function correctly. Cylinder diameter and length should be verified before the start of each test if option is activated.

**NOTE:** Option should be deactivated after conclusion of correction factor testing to eliminate the unnecessary storing and printing of empty data fields.

**Cylinder Cap Type** – Toggle option ON by pressing the <4> key from the option menu which displays the Cap Type option menu list. To set required type press appropriate <NUMBER> key, and the word “Selected” is then displayed on cap type menu line. Press <EXIT> key to set and return to Test Report menu.

To change selected cap type toggle option OFF and repeat procedure above.

**Sample Age** – Toggle option ON by pressing the <5> key from the option menu, which also displays the Age Units option menu list. To select required time units, press number <1> or <2> key and the word “Selected” is then displayed on age unit menu line. Press <EXIT> key to set and return to Test Report menu.

#### **HOW IT FUNCTIONS:**

After entering the Sample ID code at the start of a test, an age prompt D = Day, H = Hour will require user to enter a numerical Time Unit value. Press <NUMBER> keys to set required units, and press the <ENTER> key to store.

**NOTE:** The prompt will appear at the start of each test and will remain active until turned OFF.

**Sample Weight** – Press the <6> key from the option menu to toggle between OFF/ON. Press <EXIT> key to return to Test Report menu.

#### **HOW IT FUNCTIONS:**

After entering the Sample ID code at the start of a test, a Weight prompt will require user to enter a numerical value for sample weight. Press <NUMBER> keys to set required weight, and press <ENTER> key to store.

**NOTE:** The prompt will appear at the start of each test and will remain active until turned OFF.

**Average Rate of Load** – Press the <7> key from the option menu to toggle between OFF/ON.

#### **HOW IT FUNCTIONS:**

When activated, at the end of a test the Loading Rate applied to the test sample is averaged over the duration of the second half of the test, and is automatically displayed at the end of the test.

**NOTE:** Auto-store must be turned ON to store rate data to memory.

**Auto-Store** – Press <8> key from the option menu to toggle it between OFF/ON.

The Auto-Store Function must be activated in order to input a Sample Identification Code, and store it to memory along with all other test data information from optional

test report functions which will be activated automatically at the start and end of a test.

Press the <EXIT> key to return to testing screen.

### **3.5 Print Options**

Pressing the <5> key Print Options, from the Setup Menu displays a list of print and transfer options.

1. Print Last Test - Press the <1> key to print.
2. Print All Stored Tests - Press the <2> key to print.
3. Print Individual Test - Press the <3> key at the prompt, enter Sample ID Code and press <ENTER> key to print.
4. Send Last Test to PC - Press the <4> key to transfer.
5. Send All Stored Tests to PC - Press the <5> key to transfer.
6. Send Individual Test to PC - Press the <6> key. At the prompt enter Sample ID Code and press <ENTER> key to transfer.
7. Clear Transaction Database - Press <7> key. At the prompt, press the <YES> key to clear memory or press the <NO> key and <EXIT> key to return to menu without clearing memory.

Press the <EXIT> key to return to option menu.

**NOTE:** Printer and Transfer Program are optional and must be purchased separately. Please contact us for further information.

### **3.6 Rate Options**

Pressing the <6> key Rate Options from the main Setup Menu will display options:

1. Load Minutes
2. Load Seconds
3. Stress Minutes
4. Stress Seconds

To select required monitoring type press appropriate <NUMBER> key. Press <EXIT> key to return to menu. During the test, the rate of loading will be displayed in the time units selected, and the load or stress in the unit previously selected in the Engineering Units option menu.

### 3.7 Peak Load

Load values are displayed on the top line of the indicators screen.

**Peak Load Function** – Pressing the <7> key from the main Setup menu toggles the peak hold function ON/OFF.

**Peak Load ON** – When activated, this function holds the maximum load value applied to the sample during a test on the indicators display screen until the <TARE> key is pressed at the start of a new test.

**Peak Load OFF** – This function deactivates the peak hold function and allows the displayed load value to decrease and return to a zero load value when the machine's control valve is placed in the retract position.

**NOTE:** The Peak Stress Hold function cannot be deactivated.

Press the <EXIT> key to return to testing screen.

## 4.0 HOW TO ENTER A SAMPLE IDENTIFICATION CODE

Sample Identifications can be stored in memory as either a numerical code or as an alphanumeric code. The indicator's Auto-Store function must be turned ON in order to enter an identification code and store it to memory.

### HOW TO SET A NUMERICAL IDENTIFICATION CODE:

Press the <SAMPLE ID> key. At the prompt press the <NUMBER> key 0 through 9 to set required characters, which are displayed on the lower left hand side of the indicators screen. After all numbers are set, press the <ENTER> key to store.

If additional test report options are turned ON, user may be prompted to enter additional test data at this time. Example: Sample Age.

### HOW TO SET AN ALPHANUMERIC IDENTIFICATION CODE:

Press the <SAMPLE ID> key. At the prompt press the Up Scroll <ARROW> key. The alphabet and position cursor are now displayed. Use the Scroll <ARROW> keys to position the cursor on the required character and press the <ENTER> key to set. To set a numerical character press <NUMBER> 0 through 9 key to set. Once required identification code is set, press Down <ARROW> key

until cursor is positioned next to identification code and press <ENTER> key to store.

**NOTE:** If a mistake is made when entering an identification code character, press the <CLR> key to backspace the cursor one character at a time. Follow procedure to set correct character. Pressing the <CANCEL> key will clear all set characters. Repeat procedure to set and enter correct code.

## 5.0 TEST SETUP

This section describes how to setup the indicator to conduct a test.

### Step 1:

If the indicator is factory installed on a Gilson compression testing machine it should be ON when the machine is connected to an electrical power source. If display is dark, plug indicator power supply cord into outlet box located behind indicator on its frame mounting bracket.

The indicators electrical voltage requirements are listed on its serial number tag on the back of the indicator. If the indicator is being used as a retrofit installation, plug power supply cord into a wall outlet with electrical power supply source compatible with indicator. The indicators supply cord serves as the power disconnect. The power outlet supplying the indicator must be installed near the indicator and be easily accessible.

Allow the indicator to warm up for 15–20 minutes before beginning a test or calibrating it.

**NOTE:** The indicator has **NO** ON/OFF switch. Normal procedure is to allow indicator to remain ON 24 hours a day.

### Step 2:

Press <SETUP> key and verify that all menu option items are correctly set.

- Engineering Units – Check and set required counting units.
- Sample Type – Check and set sample type and dimensions.
- Sample Break – See Setup Menu Section 3.3 for instructions.
- Test Report Options – Set option menu items OFF/ON as required for test documentation on indicator screen and for hard copy test documentation.

- Auto-Store - Must be ON to store data to memory.
- Rate Options – Check and set required load rate units.
- Peak Load – Check and set peak load function ON.

**Step 3:**

Auto-Store – If required, turn option ON. Test results will be stored in memory automatically at the end of each test. See Section 3.4.

**Step 4:**

Clear stored test results IF your test documentation program requires clearing stored results from memory before storing new test data.

**NOTE:** If stored test results are **IMPORTANT**, print or transfer before clearing as cleared data is non-retrievable. See Setup Menu option <5>, Section 3.5 Print Options for instructions.

**Step 5:**

Set hydraulic loading control valve in its Retract position and turn hydraulic pump on. Insert and center test sample in testing machine.

**Step 6:**

Sample ID Number – If required, press <SAMPLE ID> key and input required sample identification code and press <ENTER> key to set. User may be required to input optional test data at this time.

**Step 7:**

To start test, use hydraulic load control valve to advance the machines piston to the desired starting position, normally a point when an air gap of 1/16in (1.5mm) or less is between the top of the test sample and bottom of upper test platen. Place control valve in Hold position. Press indicators <TARE> key to remove all residual load values on indicators screen. The top load position line of the indicator will display all “0’s” load value indicating it is ready to start. The indicator will display the following data on its display screen during a test:

Line 1: Sample load value  
 Line 2: Sample stress load value  
 Line 3: Rate of load being applied to the test sample

**Step 8:**

Many ASTM test procedures permit a higher rate of loading or a preload to be applied to a test sample at the beginning of a test. Review the applicable ASTM standard for the required Rate of Loading procedure for the sample type and size you are testing.

Shift control valve lever to Full Advance position. At sample contact, the top line of the screen will change and show a rapid increase in the load being applied to the test sample. When required preload value is reached, shift control valve lever to Metered Advance position.

The third line of the display is now showing the current live Rate of Loading being applied to the test sample. To adjust and set the required loading rate, slowly turn the knob on the control valve clockwise to decrease loading rate and counter clockwise to increase loading rate. All changes in loading rate are updated live on the display screen.

Once the required rate of loading has been established continue to monitor the display screen making any necessary adjustments to loading rate as needed.

**NOTE:** Because of the compressive nature of the materials used in unbonded pad caps, it may be difficult to set and maintain a controlled rate of loading with an applied load value of less than 20,000lb (88kN) when testing concrete cylinders.

**Step 9:**

End of Test – As the test samples ultimate load is being approached the rate of loading value will begin to decrease due to cracking in the test sample. Make no adjustments in the loading rate when this occurs.

As the test sample yields the displayed Load and Stress values will freeze and no longer increase in value, when the indicator detects that the load has fallen below the set sample break percentage. The samples peak load and stress values will be displayed and the displayed load rate will fall to a -0- value. After it has displayed a -0- value for several seconds, shift the control valve lever to the Retract position.

**Step 10:**

Information displayed at the end of a test:

Line 1: Peak Load Value  
 Line 2: Peak Stress Value  
 Line 3: Zero Load Rate  
 Line 4: If activated, Average Loading Rate

The indicators normal operating procedure at the end of a test may be affected by the activation of optional menu items. This will cause the indicator to request additional test data, which will require you to input the data before the final test results can be displayed and stored to memory.

If manually documenting test results, record information before starting a new test. When the <TARE> key is pressed, displayed test results will be **LOST**.

# **HYDRAULIC CONTROL VALVE & HYDRAULIC PUMP SECTION**

## 6.0 HYDRAULIC CONTROL VALVE

### 6.1 Metered Advance Position

Placing Control Handle No. 1 (see figure 1) into the metered advance position allows the operator to adjust the rate of loading through the use of Control Knob No. 2. The adjustment for increasing the rate of loading is to turn Knob No. 2 counter-clockwise, for decreasing the rate of loading turn Knob No. 2 clockwise. **CAUTION:** Do not over-tighten Control Knob No. 2.

For the testing of concrete cylinders to the requirements of ASTM C 39, the load must be applied at a constant rate within the range of 20 to 50 psi/sec. Knob No. 2 controls the rate of loading. Based on ASTM specifications, for a 6" diameter concrete cylinder, the loading rate should be 565 lbs/sec. to 1413 lbs/sec. or 34,000 lbs/min. to 84,000 lbs/min.

On digital load indicating machines, please see Rate of Load in the digital manual.

For analog (dial) gauge machines, a reading of 10,000 lbs. on 10 seconds is a good average and is easily set through the use of Control Knob No. 2 and a watch with a second hand.

### 6.2 Full Advance Position

Placing control Handle No. 1 into the rapid advance position causes the piston to advance rapidly in a non-controlled rate of loading. This is normally used for pre-loading a specimen or rapidly advancing the piston to reduce the daylight opening between the specimen and the platen. **CAUTION:** When pre-loading a specimen, watch the machine's load indicator to prevent overloading, or the premature failure of the specimen.

### 6.3 Hold Position

Placing Control Handle No. 1 into the hold position (see figure 1) stops the loading of the specimen and holds the pressure on the specimen at that point.

### 6.4 Retract Position

Placing Control Handle No. 1 into the retract position releases all pressure in the hydraulic cylinder allowing the piston to retract to its start position. It is not necessary to retract the piston fully between tests. A daylight opening that will allow the specimen to be inserted and removed is all that is required.

**NOTE:** During continuous operation of the machine, the Flow Control Valve will go through a significant temperature rise. This is not a cause for alarm, as the temperature rise will not affect the operation of the testing machine.

### **WARNING!**

DO NOT ALLOW THE MACHINE TO TRAVEL BEYOND THE MAXIMUM PISTON STROKE TAG LOCATED ON THE FRONT OF THE LOAD FRAME, AS YOU WILL OVER-EXTEND THE HYDRAULIC RAM. SEVERE PERSONAL INJURY AND DAMAGE TO THE MACHINE MAY RESULT.

## 6.5 Control Valve

# CONTROL VALVE

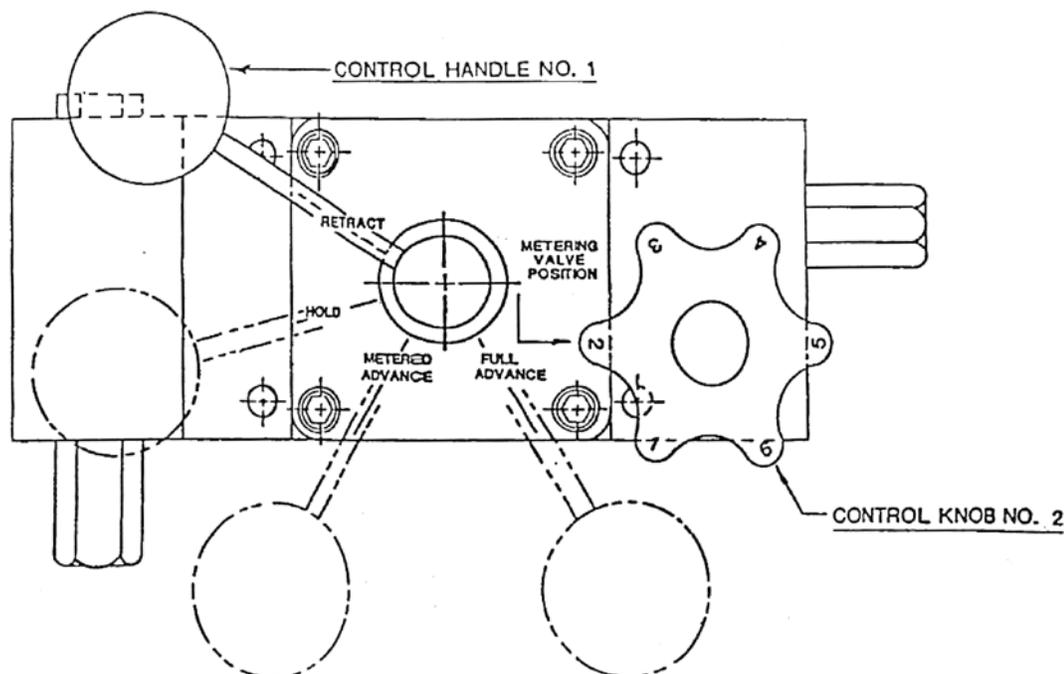


Figure 1

## 6.6 Sequence of Operation

1. With the motor switched off, carefully center specimen in testing machine.
2. Turn Control Knob No. 2 clockwise to a snug position. Never over tighten.
3. Position Valve Control Handle No. 1 to a "metered advance" position.
4. Switch on pump motor.
5. If a preload of the specimen is desired, position Valve Control Handle No. 1 to "full advance". **Caution is required not to overload or fail the specimen.**
6. Watch the gauge/digital display. When the desired preload has been attained, move the Valve Control Handle No. 1 to the "metered position".
7. To increase the rate of loading, turn Control Knob No. 2 counter-clockwise. To decrease the rate of loading, turn Control Knob No. 2 clockwise.
8. To hold pressure at any desired point, position Valve Control Handle No. 1 to the "hold" position.
9. To release pressure so that the platen will return after a test has been completed, position Valve Control Handle No. 1 to the "retract" position.
10. For repetitive testing of identical specimens, Control Knob No. 2 can be preset and then locked in position by tightening the thumbscrew located beneath the knob. For a 6" diameter specimen, the loading rate should be 565 lbs/sec. to 1413 lbs/sec. or 34,000 lbs/min. to 84,000 lbs/min.

## 6.7 Maintenance And Safety Precautions

### 6.7.1 Pump and Flow Control Valve

This two-stage hydraulic pump incorporates precision design and engineering features, which make it the most outstanding pump of its kind on the market. All moving parts are made from high-grade tool steel, heat treated, machined, ground and lapped to extremely close tolerances to assure efficient operation and long life. Peak efficiency for either continuous or intermittent operation is assured at the full range of pressures up to 10,000 psi. You will have uninterrupted, trouble-free service if you keep it clean and free of dust.

### 6.7.2 Safety Precautions

#### **WARNING!: To avoid possible personal injury,**

- Disconnect the pump from its electrical supply before performing maintenance or repair procedures.
  - Repairs and maintenance should be performed in a dust-free area by a qualified technician.
  - Should a hydraulic hose ever rupture, burst or need to be disconnected, immediately shut off the pump and shift the control valve to the retract position to release all pressure and allow the machines piston to return to its at rest position. Cycle the control valve twice to its retract position to make sure all pressure is released.
  - **Never attempt to grasp a leaking hose under pressure with your hands. The force of escaping fluid could cause serious injury.**
  - Do not subject the machines hydraulic hoses to potential hazard such as fire, extreme heat or cold, sharp surfaces or heavy impact. Do not allow the hose to kink, twist, curl or bend so tightly that oil flow within the hose is blocked or reduced.
  - Periodically inspect the hoses for wear because any of these conditions can damage the hose and possibly result in personal injury. Should a hose need replaced, contact Test Mark with your machine model number and capacity for replacement parts.
- and to assure that the cylinder retracts smoothly, then replace filler cap.
- The frequency of oil changes will depend upon the general working conditions, severity of use and overall cleanliness and care given to the testing machine and the hydraulic pump. An air hose should never be used to clean the machine or pump as it will blow dust into the hydraulic system and cause damage to the hydraulic pump and load control valve. The oil should be changed at least every three hundred (300) hours of use under severe working conditions, where dust contamination of the oil is quite likely to happen. When changing the oil drain, flush and refill the reservoir with Dextron III Automatic Transmission Fluid.

### 6.7.4 How to Operate The Pump

1. Make sure all valve and hose fittings are tight. Plug in electric motor.
2. Set valve in the retract position, set switch on run, and let pump idle for a few minutes.
3. Run piston out to its full travel several times to eliminate air from the system. This should be done with a concrete test cylinder in the machine. The pump is now ready to be put into regular operation.

### 6.7.3 Hydraulic Fluid Level

- When checking the oil level, retract the machines hydraulic cylinder to its at rest position and disconnect the power supply. Clean the area around the filler plug and remove the plug.
- For machines supplied with 3/4 hp pump, maximum capacity is when the oil is 1 1/2" (38 mm) below the cover plate with the cylinder retracted.
- For machines supplied with 1/2 hp pump, maximum capacity is when the oil is 2" (50 mm) below the cover plate with the cylinder retracted.
- When adding oil, use only **Dextron III Automatic Transmission Fluid**. To fill, insert a clean funnel with filter, add oil slowly being careful not to overfill the pump. Check oil level when finished and remove any oil if pump is overfilled. Check to see that the breather-hole in the filler cap is open to prevent the build up of excessive air pressure in the reservoir,

### 6.7.5 Trouble Shooting

#### Correcting Minor Hydraulic Problems

The hydraulic unit should be observed constantly for out of the ordinary performance and unusual noises. If any of these are present, shut off pump and take corrective steps immediately to avoid possible expensive repairs later on. Some of the most common minor problems and their remedies are listed:

PROBLEM	CAUSE	REMEDY
Improper advance or return.	Air in circuit, oil supply low.	Add oil. Run unit to work out air.
Same	Dirt in system causing valves to lock open.	Flush out entire oil system and fill with new oil.
Same	If trouble is not cleared up by above remedies, trouble may be due to dirty or plugged up strainer screen.	Drain oil. Next remove pump base cover and clean or replace screen.

**CAUTION:** Do not operate pump without screen, as particles of dirt will be sucked into pump and valve mechanisms, seriously damaging valve seats.

PROBLEM	CAUSE	REMEDY
Unable to reach pressure.	Same as above.	Same as above.
Necessary to add oil often.	Oil leaks.	Check for broken lines, loose fittings or connections.
Noise in hydraulic system.	Air in system. Low on Oil.	Add oil. Run pump to work out air.

If the above corrective measures fail to make the pump function properly, it is recommended that you send the pump back to the factory or to a qualified service representative. Under no conditions allow unqualified personnel to attempt to repair the pump, particularly the pump block unit or control valve unit, as serious irreparable damage may result.

## 7.0 VALVE ASSEMBLY




SPX Corporation  
5885 11th Street  
Rockford, IL 61109-3699 USA

Tech. Services: (800) 477-8326  
Fax: (800) 765-8326

### 7.1 Valve Diagram

# MANUAL VALVE ASSEMBLY

MODEL B, 4-POSITION, 3-WAY  
VOLUME/FLOW CONTROL --- PRESSURE COMPENSATED

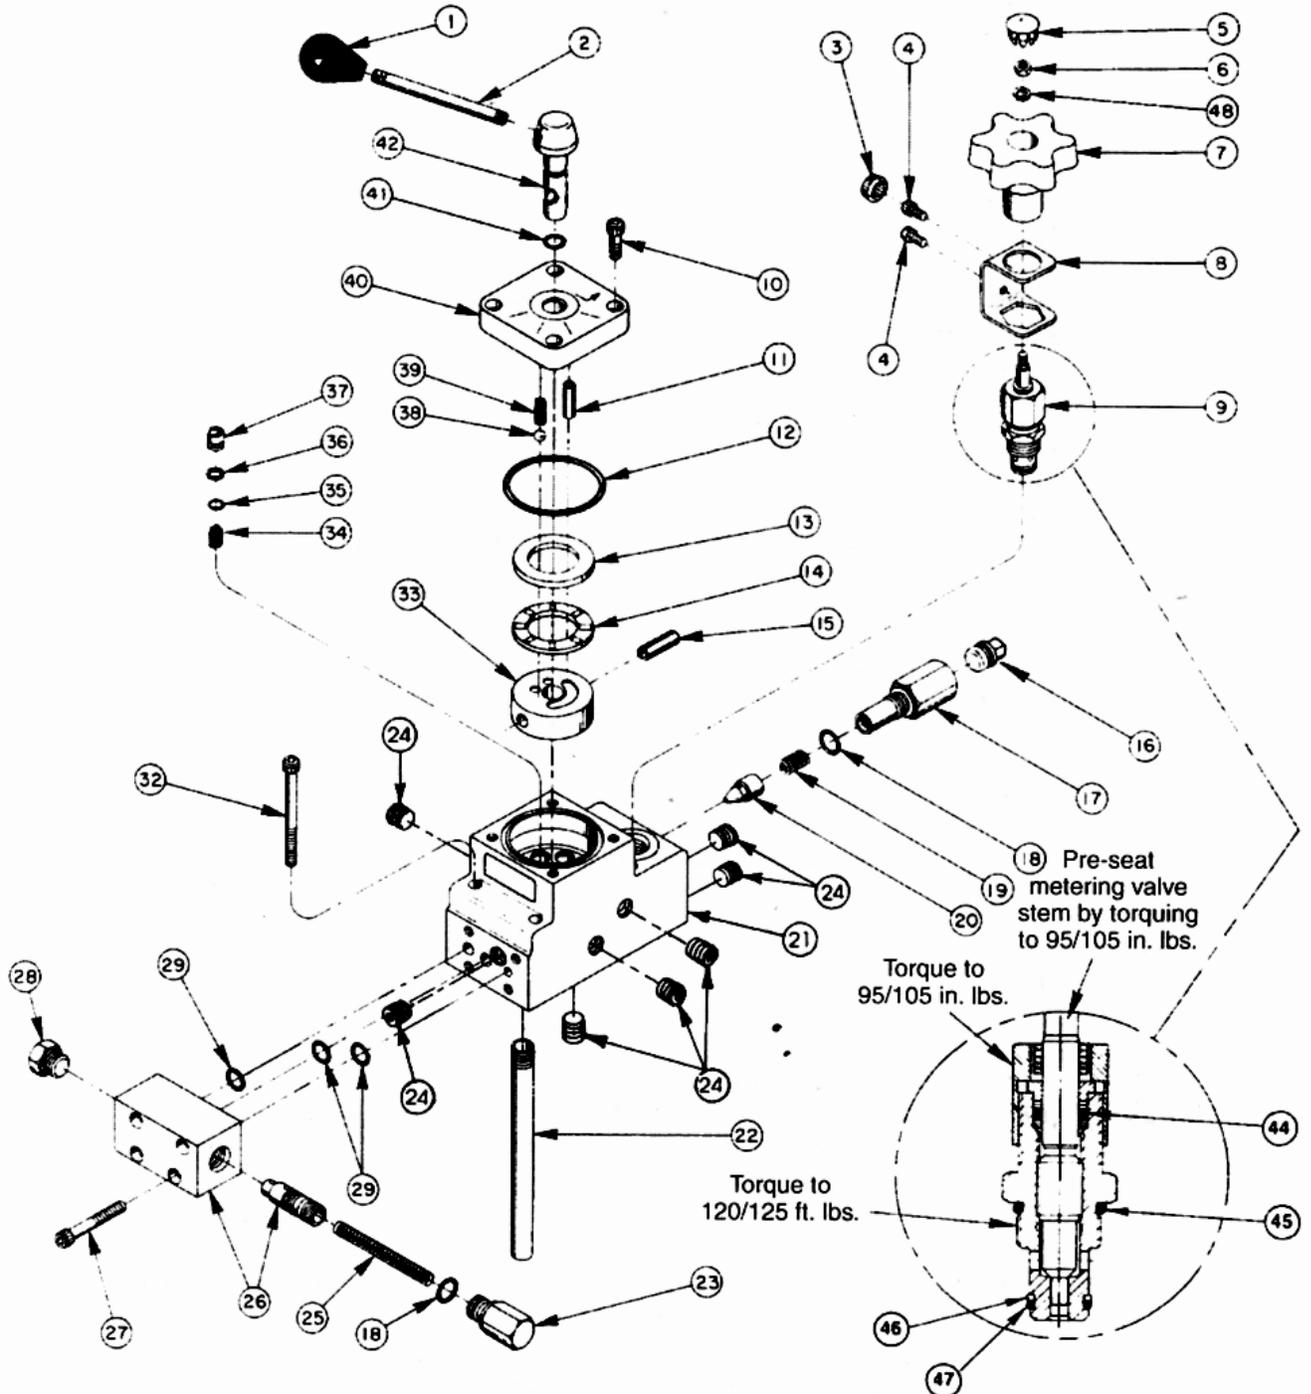

## 7.2 Valve Parts List



**NOTE:** Tighten nut with valve in open position. Line up No. 1 on knob with arrow on decal when valve is closed (CW Rotate).

**NOTE:** Due to the complexity of this valve and the testing of it, a repair kit is not available.

Item No.	Part No.	No. Req'd	Description
1	250885	1	Knob
2	21639	1	Stud
3	207382	1	Plastic Knob (on 3482-0008, 9609, & 60916, 420247-SATEC & 64529-HOGEN)
4	11434	2	Soc. Hd. Cap Screw (#10-24 x 1/2 Lg.; on 3482-0008, 9609 & 60916, 420247-SATEC)
5	11455	1	Snap Plug
6	11010	1	Machine Nut (#10-32 UNF; See note below)
7	44708	1	Valve Knob
8	302956	1	Locking Bracket (on 3482-0008, 9609 & 60916, 420247-SATEC)
9	302938	1	Flow Control Valve
10	10008	4	Soc. Hd. Cap Screw (1/4-20 x 3/4 Lg.; Torque to 100/120 in. lbs.)
11	11916	1	Roll Pin (1/4 dia. x 7/8 Lg.)
12	11229	1	O-ring (2-3/8in x 2-3/16" x 3/32)
13	11227-1	1	Bearing Race
14	11228	1	Thrust Bearing
15	10496	1	Roll Pin (5/16 dia. x 1in Lg.)
16	11127	1	Plug (3/8 NPTF)
17	302939	1	Adapter (Torque to 30/40 ft. lbs.)
18	10300	2	O-ring (.468 I.D. x .078 cs)
19	10425	1	Compression Spring (3/8 O.D. x 3/4 Lg.)
20	20771	1	Poppet
21	64528	1	Valve Body
22	212998	1	Drain Line ( <b>NOTE:</b> Used only when pump-mounted)
23	204748	1	Spring Retainer Fitting (Torque to 30/40 ft. lbs.)
24	15130	7	Pipe Plug (1/16 NPTF)
25	207404	1	Compression Spring (5/16 O.D. x 2-7/16in Lg.)
26	302953	1	Spool & Body Assembly (Consists of 44704 & 44705 which must be ordered as a set)
27	10022	4	Soc. Hd. Cap Screw (Torque to 100/120 in. lbs.)
28	11953	1	Plug (O-ring included; Torque to 30/40 ft. lbs.)
29	10269	3	O-ring (3/8 x 9/16 x 3/32)
32	10855	4	Soc. Hd. Cap Screw (1/4-20 x 2-3/4in Lg.)
33	44686	1	Rotor
34	10446	4	Compression Spring (19/64 O.D. x 7/16 Lg.)
35	10266	4	O-ring (1/4 x 3/8 x 1/16)
36	12184	4	Backup Washer (Teflon)
37	207381	4	Shear Seal
38	10375	1	Steel Ball (1/4 dia.)
39	16320	1	Compression Spring (1/4 O.D. x 3/4 Lg.)
40	201814	1	Valve Body Cap
41	10268	1	O-ring (3/8 x 1/2 x 1/16)
42	207380	1	Valve Stem
44	10267	1	O-ring (7/16 x 5/16 x 1/16)
45	10527	1	O-ring (13/16 x 0.644 x 0.087)
46	15500	1	Backup Washer (9/16 x 7/16 x 0.048)
47	12098	1	O-ring (9/16 x 7/16 x 1/16)
48	10241	1	Lockwasher

Any service repair must be done by Power Team Service Repair Department.

**8.0 ELECTRIC HYDRAULIC PUMP**




SPX Corporation  
5885 11th Street  
Rockford, IL 61109-3699 USA

Tech. Services: (800) 477-8326  
Fax: (800) 765-8326

**8.1 Pump Diagram**

**ELECTRIC HYDRAULIC PUMP**

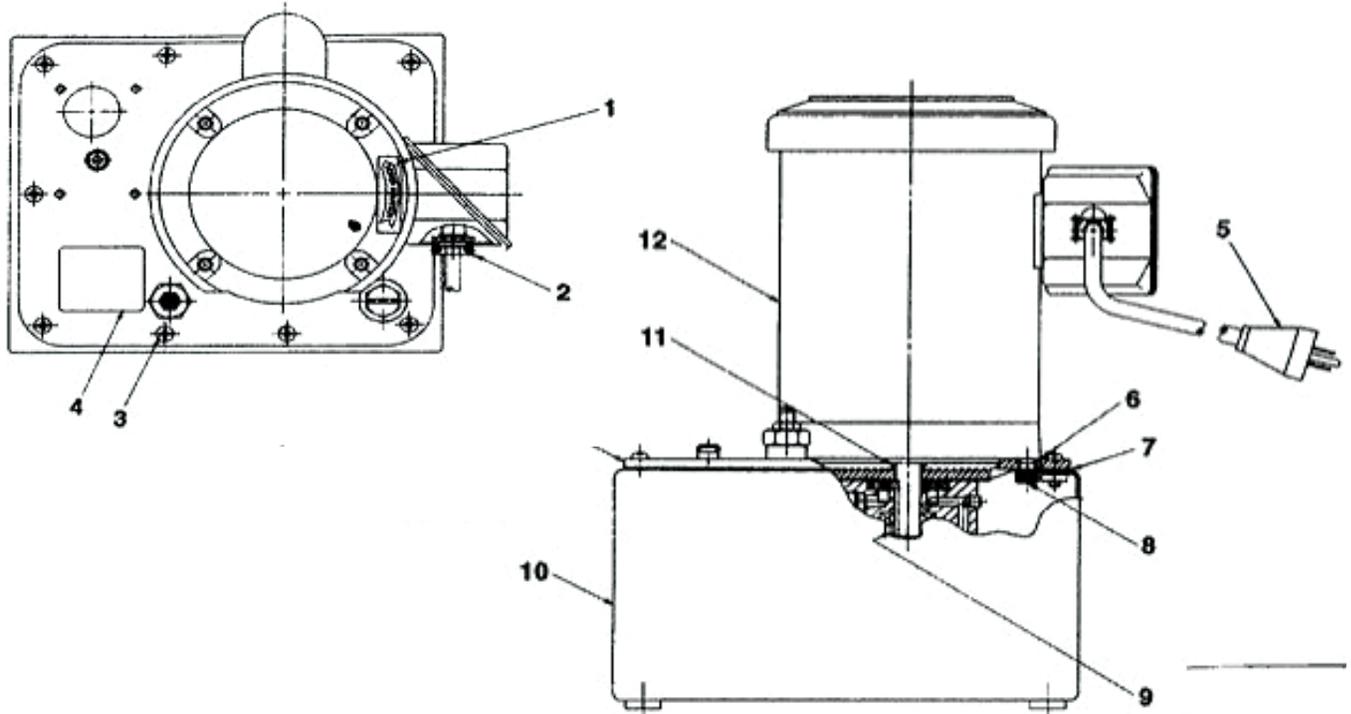


**8.2 Pump Parts List**

**PARTS LIST**

Item No.	Part No.	No. Req'd	Description
1	202504	1	Rotation Decal
2	211240	1	Connector
3	10177	10	Machine Screw (1/4-20 X 3/4 Lg.)
4	46758	1	Nameplate Decal
5	21051	1	Cord Set (12/3 STO)
6	42576BK2	1	Motor Base Gasket
7	40164	1	Gasket
8	15187	4	Cap Screw (3/8-16 UNC X .625 Lg.; Torque to 90/100 in. lbs.)
9	214097	1	Key
10	40063BK2	1	Reservoir
11	213674	1	Shaft Seal
12	44793	1	Electric Motor


8.3 Electrical Schematic

### ELECTRICAL SCHEMATIC

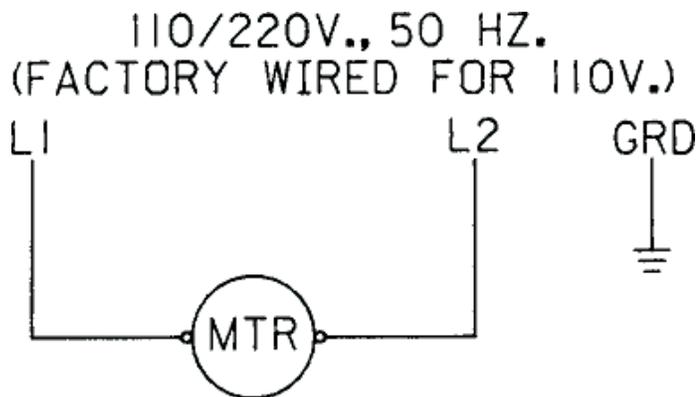

8.4 Wiring Diagram

### WIRING DIAGRAM

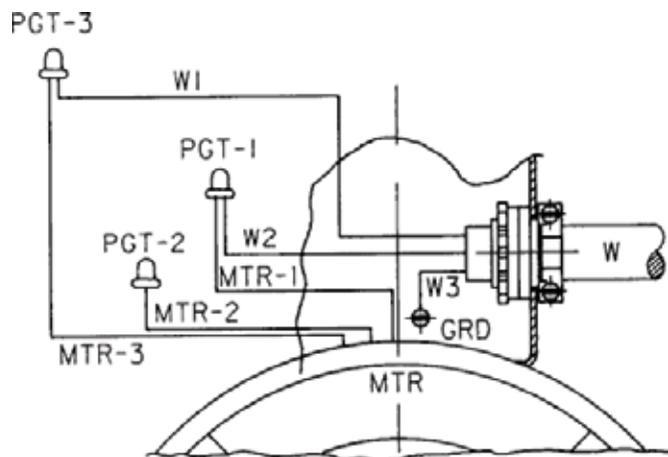

**WARNING**

To help avoid personal injury, all electrical work must be done by a qualified electrician.


**North American & International Color Codes**

Conductors	North American	International
Line .....	Black .....	Brown
Neutral .....	White .....	Blue
Ground .....	Green .....	Green/Yellow

### 8.5 Basic Pump Assembly

#### 8.5.1 Bottom View

## BOTTOM VIEW

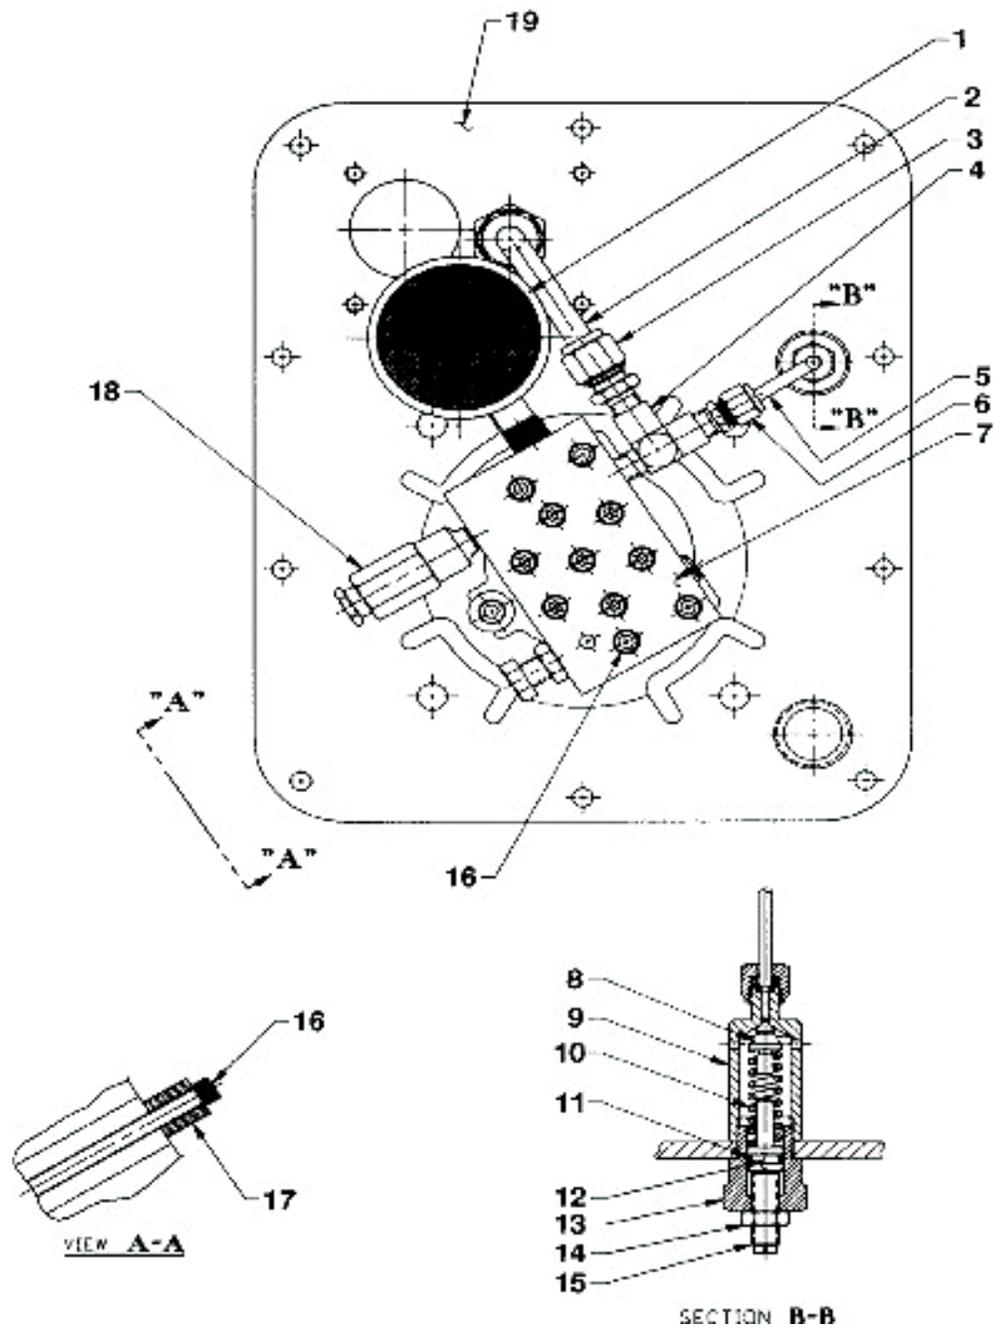


**8.5.2 Parts List and Bolt Tightening Sequence**

**PARTS LIST**

Item No.	Part No.	No. Req'd	Description
1	29682	1	Strainer - Filter
2	214930	1	Oil Line Tube
3	12696	1	Straight Fitting
4	18969	1	Tee Fitting
5	214868	1	Pressure Regulator Tube
6	11173	1	Straight Fitting
7	351410	1	High Pressure Pump Ass'y (On pumps built after 2-1-97)
8	21046	1	Valve Stem
9	22361	1	Valve Body
10	10495	1	Compression Spring
11	10268	1	O-ring (1/2 X 3/8 X 1/16)
12	21306	1	Spring GuideN
13	21305	1	Valve Cap
14	10386	1	Hex Jam Nut
15	22362	1	Valve Adjusting Screw
16	15642	5	Soc. Hd. Cap Screw (1/4-20 UNC X 1/2 Lg.; Torque to 55/65 in. lbs.)
17	214720	1	Spacer
18	21278	1	Valve Relief
19	47404	1	Reservoir Cover


**BASIC BOLT TIGHTENING SEQUENCE**

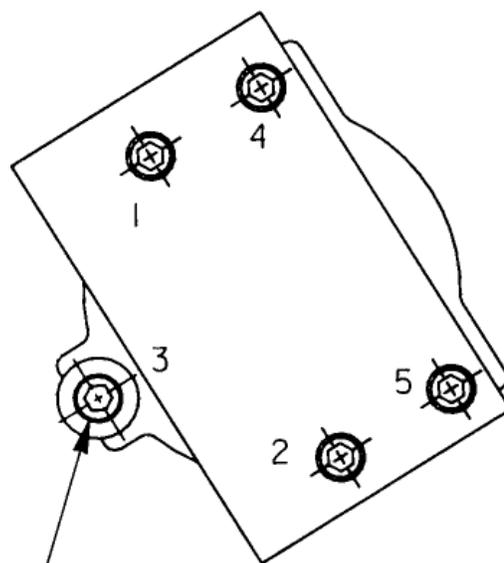

CROSS TORQUE IN 20/30 IN. LBS.  
INCREMENTS IN ORDER SHOWN.

### 8.5.3 Pump Assembly Side View


## PUMP ASSEMBLY SIDE VIEW

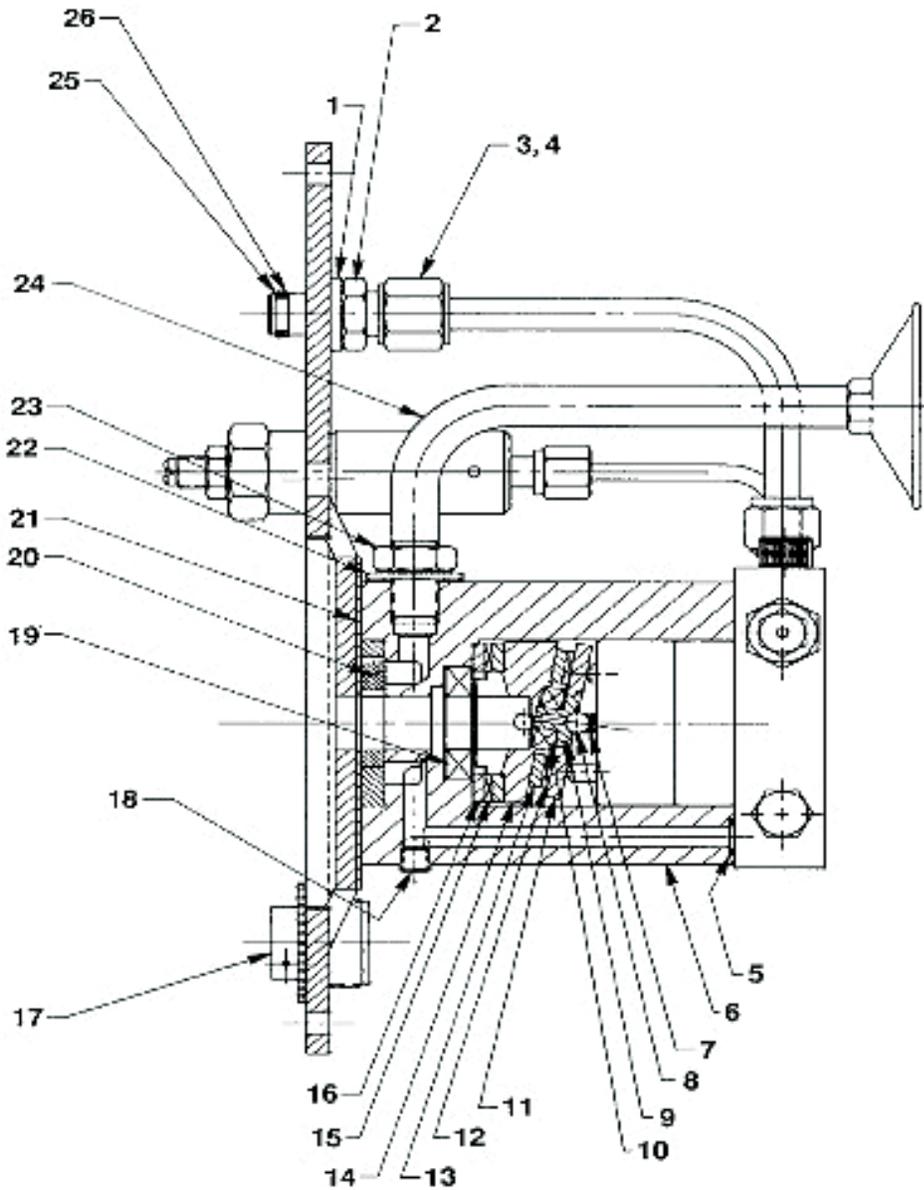

**8.5.4 Pump Assembly Parts List**


Item No.	Part No.	No. Req'd	Description
1	21484	1	Washer
2	214882	1	Valve Connector ( <b>Note:</b> Torque valve connector [214882] to 20/30 ft. lbs. into coverplate [47404]; hold valve connector [214882] and torque tube nut [10431] to 40/50 ft. lbs.)
3	10430	1	Sleeve Tube (For 3/8 tube)
4	10431	1	Tube Nut (5/8-18 UNF)
5	10267	1	O-ring (7/16 X 5/16 x 1/16)
6	52883	1	Body Pump
7	16320	1	Compression Spring
8	10375	1	Steel Ball (1/4" dia.)
9	23547	1	Top Plate Bearing
10	11814	1	Ball Bearing
11	23548	1	Top Plate Bearing
12	15431	1	Needle Thrust Bearing
13	15432	1	Needle Thrust Race Bearing
14	35271	1	Angle Plate
15	11228	1	Needle Thrust Bearing
16	11227	2	Needle Thrust Race Bearing
17	213706	1	Filler Cap
18	11084	1	Pipe Plug (1/16 NPTF; Torque to 35/45 in. lbs. oiled)
19	15695	1	Ball Bearing
20	15693	1	Gerotor Set
21	307296	1	Wear Plate
22	213709	1	Seal Washer (Turn on - Do not push on)
23	10390	1	Hex Jam Nut
24	213686	1	Intake Tube
25	10268	1	O-ring (1/2 X 3/8 X 1/16)
26	11863	1	Backup Washer (Teflon)

**8.5.5 Hydraulic Schematic**

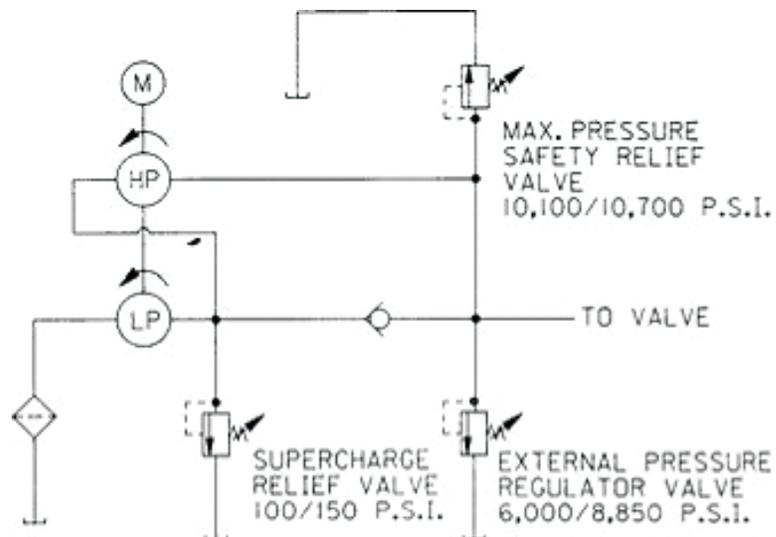

### 8.5.6 High Pressure Pump Assembly


## HIGH PRESSURE PUMP ASSEMBLY

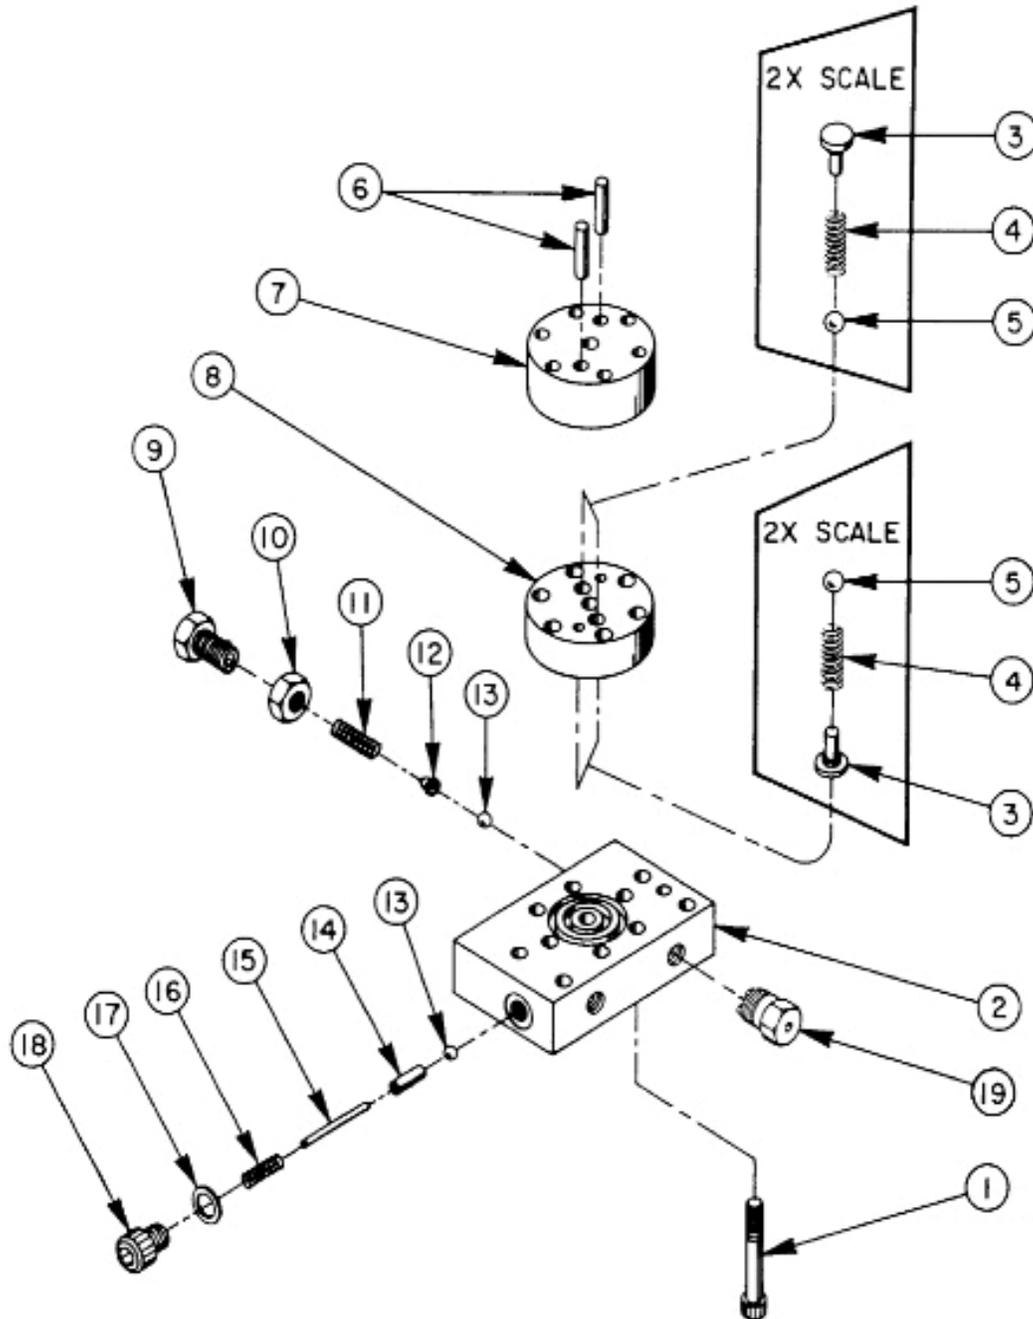

### 8.5.7 High Pressure Pump Assembly Parts List

Item No.	Part No.	No. Req'd	Description
1	*16747	7	Torx Drive Cap Screw (1/4-28 X 1-3/4 Lg.; See diagram below)
2	*36912	1	Pump End Plate
3	*24549	4	Valve Guide
4	*10445	4	Compression Spring (.161 O.D. X 23/32 Lg.)
5	*12223	4	Steel Ball (3/16 dia.)
6	*20775	2	Piston (7/32 dia.)
7	*41006	1	Pump Barrel
8	*41007	1	Valve Head
9	29786	1	Adjusting Screw
10	10386	1	Jam Nut (3/8-24 UNF)
11	11454	1	Compression Spring (1/4 O.D. X 5/8 Lg.)
12	200796	1	Adapter, Spring & Ball
13	10375	2	Steel Ball (1/4 dia.)
14	201998	1	Sleeve
15	12571	1	Roll Pin (1/8 dia. X 1-3/8 Lg.)
16	14431	1	Compression Spring (3/16 O.D. X 3/4 Lg.)
17	12042	1	Copper Washer (9/16 X 3/8 X 1/32)
18	29690	1	Cap Screw (Torque to 180 in. lbs.)
19	306957	1	Air Bleed Valve

### 8.5.8 High Pressure Bolt Tightening Sequence

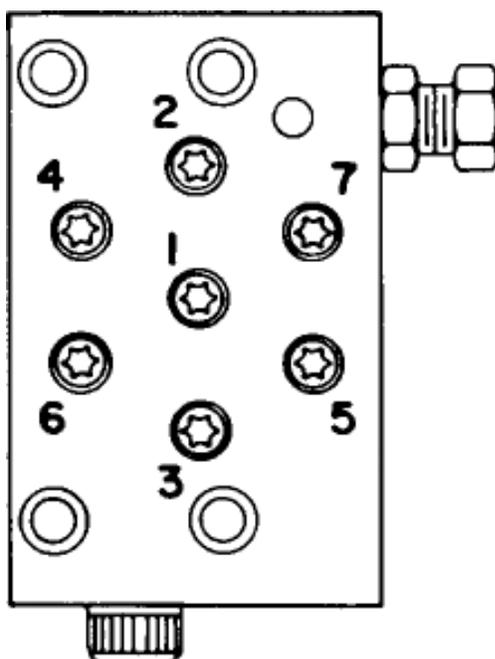

**NOTE:** Assemble in sequence shown. Lubricate under head and on threads. Torque to 170 in. lbs.

## **9.0 WARRANTY STATEMENT**

### **STATEMENT OF WARRANTY**

Gilson Company, Inc. warrants this concrete compression machine against defects in workmanship and materials for a period of 24 months from the original date of shipment, provided the equipment has been properly installed, maintained and operated in accordance with installation and operating instructions. This limited and exclusive remedy does not cover normal wear and tear. The Gilson Company, Inc. manufactured product must be free from accident, damage by fire, water or act of God to be eligible for warranty.

Gilson Company, Inc. will repair, replace or credit at Gilson Company's option, defective product or component parts. When repair can be accomplished by exchange of a component part, the customer may be required to remove the part of modular component and install the exchanged part.

Warranty does not cover expenses, either direct or indirect, that may arise from the use or the inability to use Gilson Company, Inc. products, or the secondary owner in the event of resale.

Products not manufactured by Gilson Company, Inc. will carry the warranty of the original manufacturer. Under no circumstances shall Gilson Company, Inc. be liable for any injury, loss, or damages, whether direct or indirect, incidental or consequential, arising out of the use of, or inability to use the products described herein.

This exclusion of liability for loss or damages, whether direct or indirect, incidental or consequential, shall apply to all claims whether sounding in contract, warranty, tort including both negligence and strict liability, or any other basis of liability.