




ASSEMBLY INSTRUCTIONS

Support Stand for HM-372B and HM-373B Flow Cones HM-372A

A. Flow Cone Support Ring

B. Leg Sockets

C. Support Legs

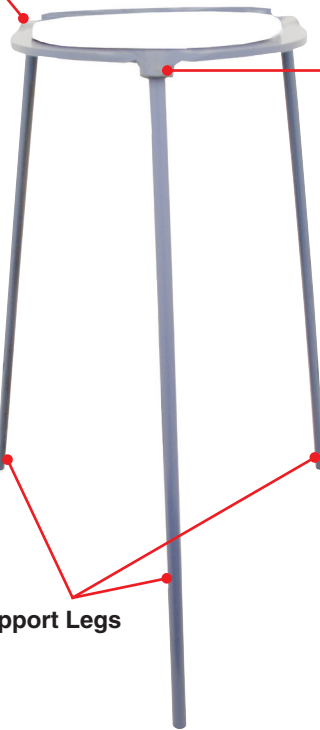

HM-372A



HM-372A shown with HM-372 Flow Cone Set
and MA-48 Stainless Steel Beaker

1. Using a 1/8in Hex Head Wrench, loosen the Allen-Head Set Screws of the Flow Cone Support Ring (A), located in the sides of each of the three Leg Sockets (B).
2. Insert a Support Leg (C) fully into each Socket and secure by tightening the Set Screws.
3. Set the assembled Flow Cone Stand on a level, sturdy surface and insert the HM-372B or HM-373B Flow Cone.
4. The assembled set is ready for use following the procedures noted in ASTM C939, Standard Test Method for Flow of Grout for Preplaced-Aggregate Concrete.

Rev: 07/29/2014